

Rigging the fixture

Caution!

1. The installations must be carried out by an authorized dealer or trained professional.
2. Unit may cause severe injuries if you have doubts concerning the safety do not install.
3. Unit is to be 24 inches away from flammable materials (decoration material)
4. Use high quality installation equipment to hang unit.

When rigging a unit it is very important that you follow common safety procedures. Rigging requires extensive experience including but not limited to calculating working loads, material being used and periodic safety inspections. If you lack these qualifications, do not attempt the installation yourself, instead use a professional structural rigger.

When rigging the unit always be secured with a secondary safety attachment. The installation location of the projector has got to be built in the way that it can hold 10 times the weight for 1 hour with out any harming. Installation should be checked at least one time a year by a skilled person.

DMX Profile

Circa XS Scoop LED 2 Ch Mode

DMX Channel	Function	Description	Value	Init
1	Dimmer	Dimmer Off to Full	0-255	255
2	Macro	No Function	0-41	0
		Macro 1 (slow to fast)	42-83	
		Macro 2 (slow to fast)	84-125	
		Macro 3 (slow to fast)	126-167	
		Macro 4 (slow to fast)	168-209	
		Macro 5 (slow to fast)	210-255	

Circa XS Scoop LED 3 Ch Mode

DMX Channel	Function	Description	Value	Init
1	Dimmer	Dimmer Off to Full	0-255	255
2	LED Color	Center & Back Warm White	0-255	255
3	LED Color	Center Amber	0-255	255

Circa XS Scoop LED 14 Ch Mode

DMX Channel	Function	Description	Value	Init
1	Dimmer	Master Dimmer Off to Full	0-255	255
2	LED Color	Outer Red LED intensity	0-255	255
3	LED Color	Outer Green LED intensity	0-255	255
4	LED Color	Outer Blue LED intensity	0-255	255
5	Outer Strobe	No Function	0-1	0
		Strobe (slow to fast)	2-127	
		Strobe Pulse (slow to fast)	128-170	
		Random Strobe (slow to fast)	171-213	
		Random Pulse (slow to fast)	214-255	
6	LED Color	Inner Red LED intensity	0-255	255
7	LED Color	Inner Green LED intensity	0-255	255
8	LED Color	Inner Blue LED intensity	0-255	255
9	Inner Strobe	No Function	0-1	0
		Strobe (slow to fast)	2-127	
		Strobe Pulse (slow to fast)	128-170	
		Random Strobe (slow to fast)	171-213	
		Random Pulse (slow to fast)	214-255	
10	LED Color	Center Warm White	0-255	255
11	LED Color	Center Amber	0-255	255
12	Center Strobe	No Function	0-1	0
		Strobe (slow to fast)	2-127	
		Strobe Pulse (slow to fast)	128-170	
		Random Strobe (slow to fast)	171-213	
		Random Pulse (slow to fast)	214-255	
13	LED Color	Reflective Warm White	0-255	255
14	Reflective Strobe	No Function	0-1	0
		Strobe (slow to fast)	2-127	
		Strobe Pulse (slow to fast)	128-170	
		Random Strobe (slow to fast)	171-213	
		Random Pulse (slow to fast)	214-255	

Circa XS Scoop LED 17 Ch Mode

DMX Channel	Function	Description	Value	Init
1	Dimmer	Master Dimmer Off to Full	0-255	255
2	LED Color	Outer Red LED intensity	0-255	255
3	LED Color	Outer Green LED Intensity	0-255	255
4	LED Color	Outer Blue LED Intensity	0-255	255
5	Macro	No Function	0-1	0
		Fade	2-85	
		Snap	86-170	
		Pulse (selected color)	171-255	
6	Macro Speed	Outer Ring Macro Speed	0-255	0
7	Outer Ring Strobe	No Function	0-1	0
		Strobe (slow to fast)	2-127	
		Strobe Pulse (slow to fast)	128-170	
		Random Strobe (slow to fast)	171-213	
		Random Pulse (slow to fast)	214-255	
8	LED Color	Inner Red LED intensity	0-255	255
9	LED Color	Inner Green LED Intensity	0-255	255
10	LED Color	Inner Blue LED Intensity	0-255	255
11	Macro	No Function	0-1	0
		Fade	2-85	
		Snap	86-170	
		Pulse (selected color)	171-255	
12	Macro Speed	Inner Ring Macro Speed	0-255	0
13	Inner Ring Strobe	No Function	0-1	0
		Strobe (slow to fast)	2-127	
		Strobe Pulse (slow to fast)	128-170	
		Random Strobe (slow to fast)	171-213	
		Random Pulse (slow to fast)	214-255	
14	Warm White	Center Warm White	0-255	255
15	Amber	Center Amber	0-255	255
16	Warm White	Center Reflective Warm White	0-255	255
17	Center Strobe	No Function	0-1	0
		Strobe (slow to fast)	2-127	
		Strobe Pulse (slow to fast)	128-170	
		Random Strobe All (slow to fast)	171-213	
		Random Pulse (slow to fast)	214-255	