

DMX CHART



STRIKE Array 4

DMX Values

13 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	White 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	White 2	000 ⇔ 255	0–100%
6	Amber 2	000 ⇔ 255	0–100%
7	White 3	000 ⇔ 255	0–100%
8	Amber 3	000 ⇔ 255	0–100%
9	White 4	000 ⇔ 255	0–100%
10	Amber 4	000 ⇔ 255	0–100%
11	Strobe	000 ⇔ 010	No function
		011 ⇔ 132	Strobe, slow to fast (all pods)
		133 ⇔ 255	Strobe, slow to fast (random strobe macros)
12	Auto Programs	000 ⇔ 010	No function
		011 ⇔ 040	Auto 1 (slow to fast)
		041 ⇔ 080	Auto 2 (slow to fast)
		081 ⇔ 120	Auto 3 (slow to fast)
		121 ⇔ 160	Auto 4 (slow to fast)
		161 ⇔ 200	Auto 5 (slow to fast)
		201 ⇔ 240	Auto 6 (slow to fast)
241 ⇔ 255	No function		
13	Dimmer Speed Mode*	000 ⇔ 051	Current dimmer speed mode
		052 ⇔ 101	Dimmer speed mode off (linear dimmer)
		202 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)



*Hold desired dimmer speed value for 3 seconds, then release. This changes the dimmer speed setting in the menu.

10 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red Shift	000	On
		001 ⇔ 255	Off
4	Strobe	000 ⇔ 010	No function
		011 ⇔ 132	Strobe, slow to fast (all pods)
		133 ⇔ 255	Strobe, slow to fast (random strobe macros)
5	White 1	000 ⇔ 255	0–100%
6	White 2	000 ⇔ 255	0–100%
7	White 3	000 ⇔ 255	0–100%
8	White 4	000 ⇔ 255	0–100%
9	Auto Programs	000 ⇔ 010	No function
		011 ⇔ 040	Auto 1 (slow to fast)
		041 ⇔ 080	Auto 2 (slow to fast)
		081 ⇔ 120	Auto 3 (slow to fast)
		121 ⇔ 160	Auto 4 (slow to fast)
		161 ⇔ 200	Auto 5 (slow to fast)
		201 ⇔ 240	Auto 6 (slow to fast)
241 ⇔ 255	No function		
10	Dimmer Speed Mode*	000 ⇔ 051	Current dimmer speed mode
		052 ⇔ 101	Dimmer speed mode off (linear dimmer)
		202 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)

6 Ch

Channel	Function	Value	Percent/Setting
1	White 1	000 ⇔ 255	0–100%
2	White 2	000 ⇔ 255	0–100%
3	White 3	000 ⇔ 255	0–100%
4	White 4	000 ⇔ 255	0–100%
5	Red Shift	000	On
		001 ⇔ 255	Off
6	Dimmer Speed*	000 ⇔ 051	Current dimmer speed mode
		052 ⇔ 101	Dimmer speed mode off (linear dimmer)
		202 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)



*Hold desired dimmer speed value for 3 seconds, then release. This changes the dimmer speed setting in the menu.

DMX CHART



STRIKE Array 4

5 Ch


Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red Shift	000 001 ⇔ 255	On Off
3	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
4	Auto Program	000 ⇔ 010 011 ⇔ 040 041 ⇔ 080 081 ⇔ 120 121 ⇔ 160 161 ⇔ 200 201 ⇔ 240 241 ⇔ 255	No function Auto 1 (slow to fast) Auto 2 (slow to fast) Auto 3 (slow to fast) Auto 4 (slow to fast) Auto 5 (slow to fast) Auto 6 (slow to fast) No function
5	Dimmer Speed*	000 ⇔ 051 052 ⇔ 101 202 ⇔ 152 153 ⇔ 203 204 ⇔ 255	Current dimmer speed mode Dimmer speed mode off (linear dimmer) Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)

4 Ch

Channel	Function	Value	Percent/Setting
1	White 1	000 ⇔ 255	0–100%
2	White 2	000 ⇔ 255	0–100%
3	White 3	000 ⇔ 255	0–100%
4	White 4	000 ⇔ 255	0–100%

3 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red Shift	000 001 ⇔ 255	On Off
3	Dimmer Speed*	000 ⇔ 051 052 ⇔ 101 202 ⇔ 152 153 ⇔ 203 204 ⇔ 255	Current dimmer speed mode Dimmer speed mode off (linear dimmer) Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)

 ***Hold desired dimmer speed value for 3 seconds, then release. This changes the dimmer speed setting in the menu.**

1 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%